

bag.
Installation:

5402 DISPOSABLE HEEL GROUNDER


1. Insert the non-adhesive end of the heel grounder inside the shoe so that the black dot is in the center of the heel area.

or glue are attached to the upper part of the shoe, avoiding wear. Yellow color makes heel grounder verification simple. Grounders are packaged 100 per

- 2. Wrap the heel grounder around the back (or side) of shoe so that the adhesive can be adhered to the bottom of the heel.
- 3. Remove perforated section by lifting the paper backing from the middle as shown.
- 4. Press adhesive part of the foot grounder to the heel of the shoe. Do not allow adhesive to come in contact with any part of the shoe except for the heel. The adhesive may leave a residue.
- 5. Step in to shoe. Disposable heel grounder is to be installed on both shoes and used with ESD flooring.
- 6. Test each worn foot grounder with a Personal Grounding Tester

Specifications	Typical Value	
Size	1/2" W x 12" L	
Resistance to Ground (Rtg)	$\geq 5 \times 10^4 < 8 \times 10^5 \text{ ohms}$	

Item	Description	Length	Package
<u>5402</u>	Disposable Heel Grounder	12"	100 per bag

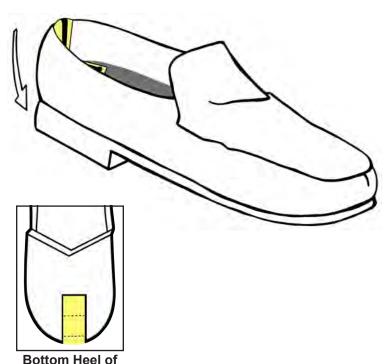

Unless otherwise noted, tolerance ± 10%

Shoe

Specifications and procedures subject to change without notice.

Remove perforated section here and begin peeling towards the left

SCS

www.ith.com

DRAWING NUMBER 5402 DATE August 2015