




PAL Refractometer

How to Use

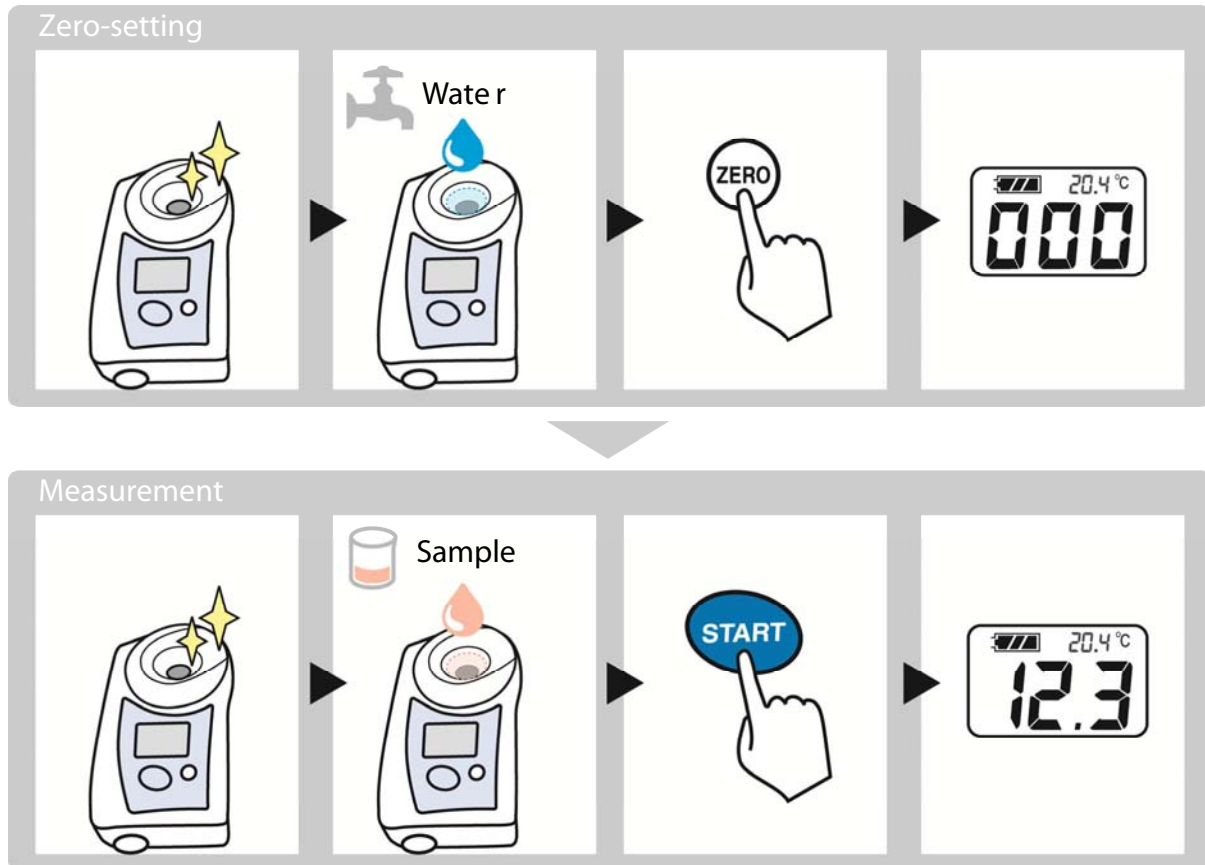

Error Messages

Low Battery	Zero Set Fault	Too low / Sample not enough	Out of range (too high)
Too bright	Temp. error (too low)	Temp. error (too high)	Malfunction

Attention

- *Thoroughly wash and dry after use.
- *Clean oily residues with alcohol or soap.