




T6-1000 PRO

Electrical Tester

with FieldSense Technology

See *Safety Information*

Go to register your product and find more information, or download this Quick Reference Guide in other languages. General Safety Information is in the printed Safety Information document that ships with the Product. More specific safety information is listed where applicable.

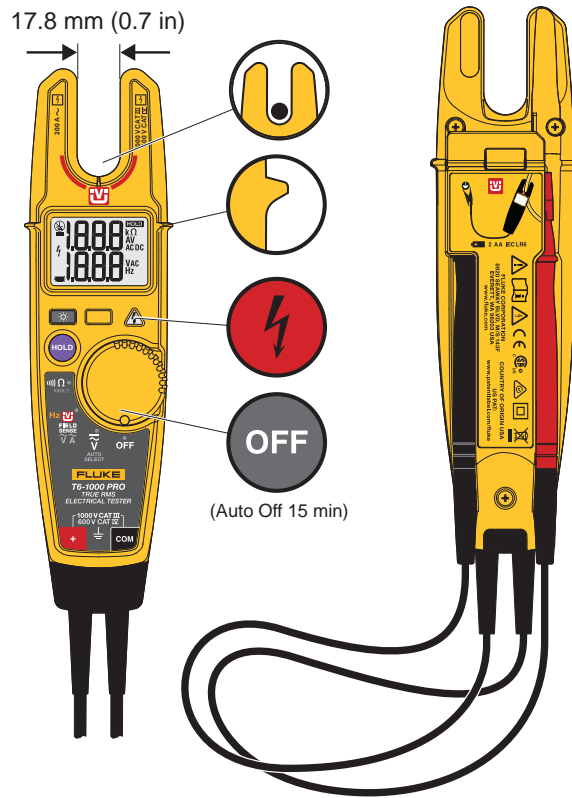








PN 5206617 March 2020
© 2020 Fluke Corporation. All rights reserved.
Specifications are subject to change without notification.

1.800.561.8187

www.itm.com


information@itm.com

Symbols





	Hazardous voltage ≥ 30 V.
	Test with fork and ground probe or alligator clip.
	Battery full charge.
	Battery low. Replace.
	Back light
	Test with probes.
	No earth ground connection.




Wire Position

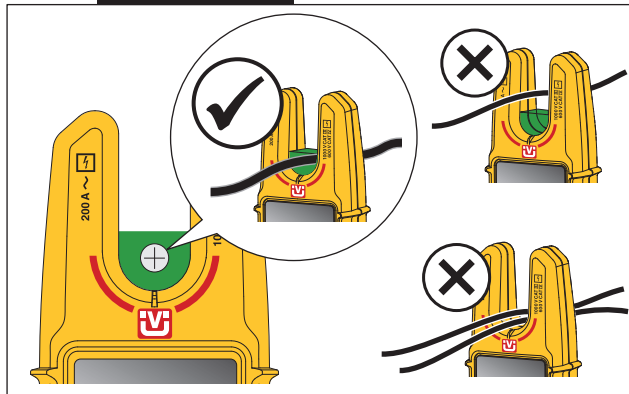

Finger Guard

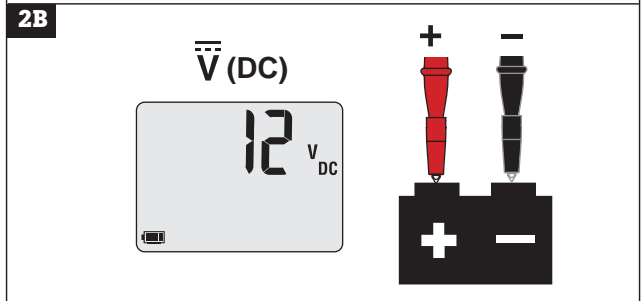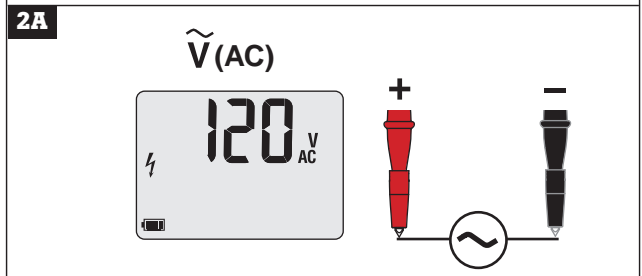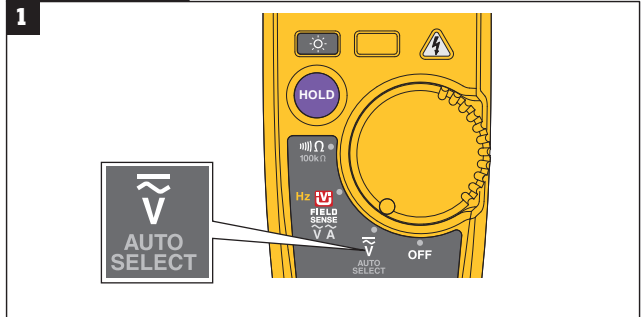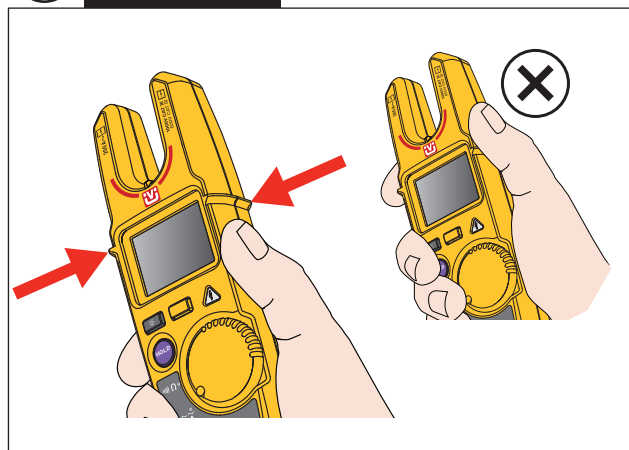

HOLD

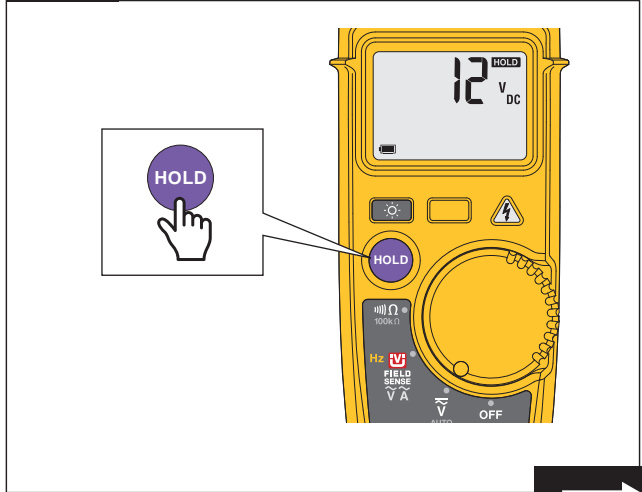

1 $\tilde{A}/\tilde{V}/\text{Hz}/\Omega$

2

3

4 Hz


1

2A

2B

Ω

Lead Replacement

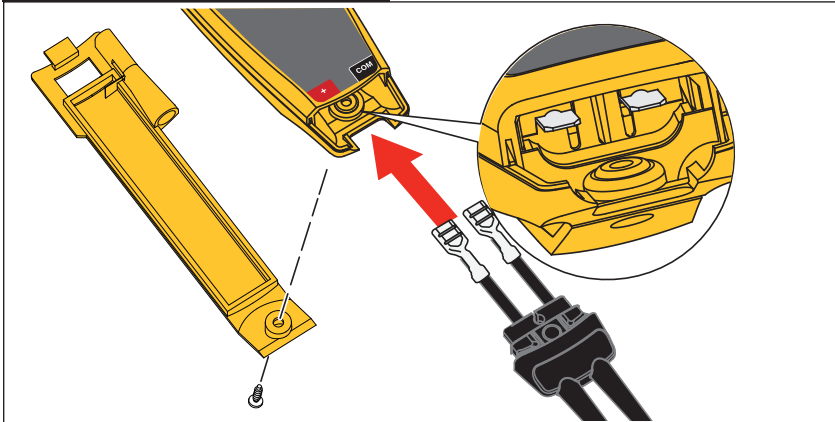

Replacement Parts

Test Lead Assembly (T5-RLS) Replace only with Fluke double-insulated leads.	PN 4462973
TP1 Single Probe, Flat-Tip, Red	PN 648128
TP1 Single Probe, Flat-Tip, Black	PN 648102
TP38 Single Probe, Round-Tip, Red	PN 1276841
TP38 Single Probe, Round-Tip, Black	PN 1276852
Battery Door	PN 5132103
Battery Door Screw	PN 1618578
AC285 Alligator Clip	PN 1610159
H-T6 Belt Holster	PN 4910585

